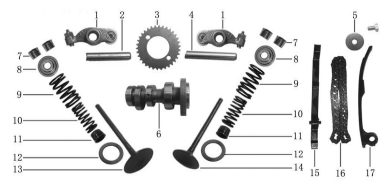 
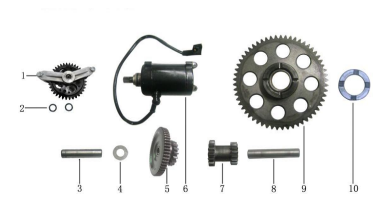 
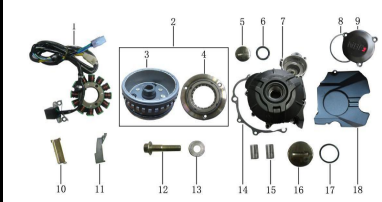 
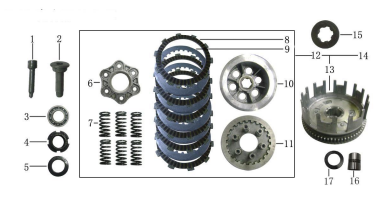 
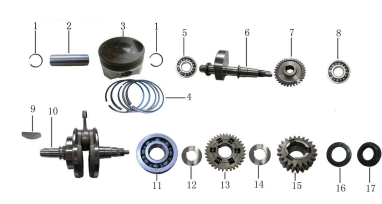 
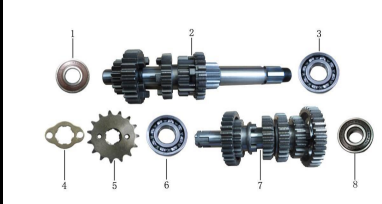 
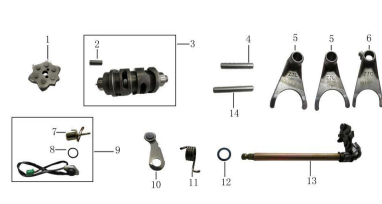 
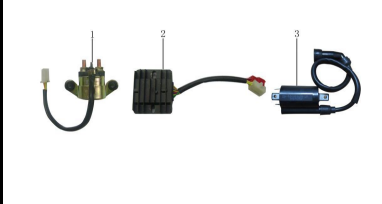 
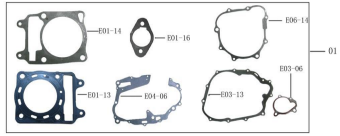 
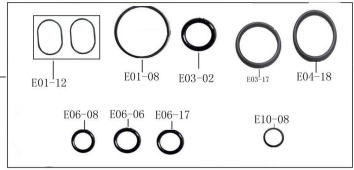 
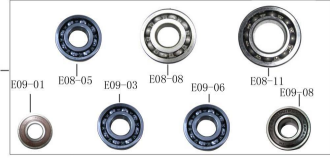 
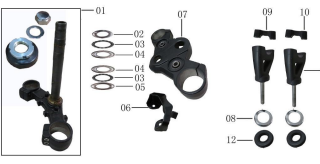 


CONTENTS—ENGINE GROUP





E01 CYLINDER BLOCK & CYLINDER HEAD 	E02 VALVE TRAIN 	E03 RIGHT CRANKCASE COVER & WATER PUMP ASSY 
E04 CRANKCASE 	E05 OIL PUMP & STARTING MOTOR 	E06 MAGNETO 
E07 CLUTCH 	E08 CRANKSHAFT & PISTON 	E09 TRANSMISSION 
E10 GEARSHIFT DEVICE 	E11 GEARSHIFT PEDAL & CARBURETOR 	E12 ELECTRIC ELEMENTS 

CONTENTS—ENGINE GROUP		
E13	E14	E15
A FULL SET OF GASKET 	A FULL SET OF SEAL 	A FULL SET OF O-RING 
E16		
A FULL SET OF BEARING 		

CONTENTS—FRAME GROUP

F01 LF200-3B F-01 LIGHTS 	F02 LF200-3B F-02 FRONT FAIRING F-02 前导流罩 FRONT FAIRING 	F03 LF200-3B F-03 GRIP & SWITCH 
F04 LF200-3B F-04 STEERING STEM 	F05 FRONT FENDER & SHOCK ABSORBER 	F06 FUEL TANK GUARD 
F07 FUEL TANK 	F08 SIDE COVER 	F09 FRONT WHEEL 
F10 REAR FORK 	F11 REAR WHEEL 	F12 SEAT & REAR FENDER 

    CONTENTS—FRAME GROUP

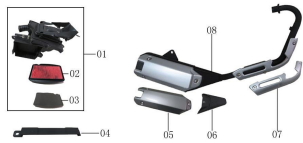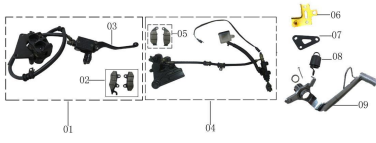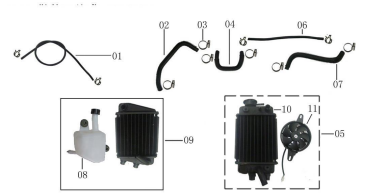
F13 AIR CLEANER & EXHAUST MUFFLER 	F14 FRONT & REAR BRAKE 	F15 FOOTRESTS 
F16 FRAME BODY 	F17 RADIATOR 	F18 ELECTRICAL ELEMENTS 
F19 FUEL EVAPORATING SYSTEM 	F20 ELECTRONIC FUEL INJECTION SYSTEM 	

165ML-E E-01 CYLINDER BLOCK & CYLINDER HEAD




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E01-01	BIA12313A0M01	CAP NUT M8	PC	
E01-02	MQA12345A0A00	COPPER WASHER, BOLT, CYLINDER $\Phi 10.5 \times \Phi 20 \times 2$	PC	
E01-03	BJX34210A0A00	SPARK PLUG	PC	
E01-04	GIB19352A1B12	THERMOSTAT COVER	PC	
E01-05	BLC12110A2B08	BLOCK UNIT, CYLINDER	PC	
E01-06	BLC12242A1B08	COVER, CYLINDER HEAD, LH	PC	
E01-07	Q1270845F32	BOLT, M8x45	PC	
E01-08	BJX12247A0A00	GASKET, COVER, CYLINDER HEAD, LH	PC	
E01-09	BLC12210A1B08	HEAD UNIT, CYLINDER	PC	
E01-10	BJX14137A0N02	RETAINER, DISTRIBUTING CAMSHAFT	PC	
E01-11	PIF12243A0B08	COVER, VALVE	PC	
E01-12	PIF12246A0A00	VALVE COVER O-RING	PC	
E01-13	BLC12221A0A00	GASKET, CYLINDER HEAD	PC	
E01-14	BLD12121A0A00	GASKET, CYLINDER BLOCK	PC	
E01-15	BIA12218A0A00	DOWEL PIN, CYLINDER HEAD $\Phi 10 \times 20$	PC	
E01-16	BIA14519A0W02	WASHER, TENSIONER	PC	
E01-17	BLC14500-0001	TENSIONER ASSY	PC	
E01-18	TY039340A0A00	COOLANT TEMPERATURE SENSOR	PC	
E01-19	GIB19310A0A00	VALVE, THERMOSTAT	PC	

 165ML-E E-02 VALVE TRAIN

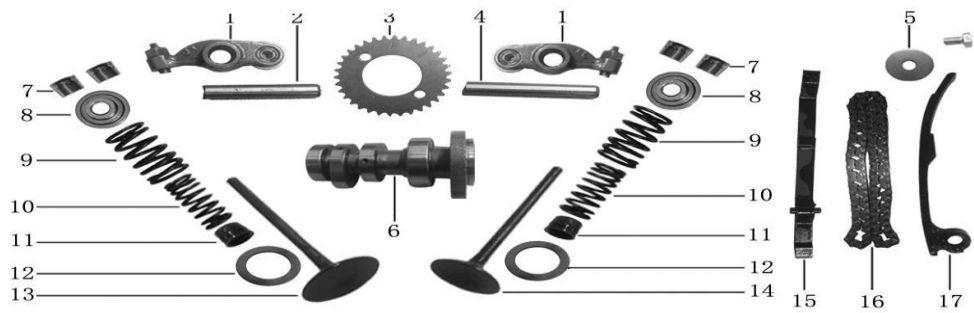


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E02-01	BJX14410A0A00	ROCKER ARM ASSY,	PC	
E02-02	BJX14421A0A00	SHAFT, ROCKER ARM II	PC	
E02-03	BIA14321A0A00	SPROCKET, TIMING DRIVEN	PC	
E02-04	BJX14413A0A00	SHAFT, ROCKER ARM I	PC	
E02-05	BJX14662A0A00	WASHER, TENSIONING PLATE	PC	
E02-06	BLC14100A0A00	CAMSHAFT ASSY I	PC	
E02-07	PGA14752A0A00	SPLIT CONE, VALVE	PC	
E02-08	BJX14751A0A00	SEAT, SPRING, UPPER	PC	
E02-09	BJX14755A0Z50	SPRING, VALVE, OUTER	PC	
E02-10	BJX14756A0Z50	SPRING, VALVE, INNER	PC	
E02-11	PGA14730A0A00	OIL SEAL, VALVE STEM	PC	
E02-12	PGA14753A0A00	VALVE OUTER SPRING SEAT	PC	
E02-13	BJX14710A0Z04	VALVE, INTAKE	PC	
E02-14	BJX14720A0Z04	VALVE, EXHAUST	PC	
E02-15	BIA14610A0A00	GUIDING PLATE	PC	
E02-16	BJX14350A0A00	CHAIN, TIMING	PC	
E02-17	BJX14650A0A00	TENSIONER	PC	

 165ML-E E-03 RIGHT CRANKCASE COVER & WATER PUMP ASSY

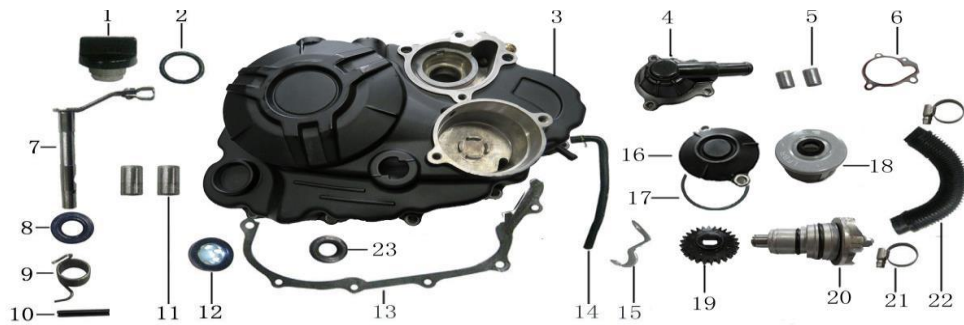


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E03-01	VMA15611A0B01	DIPSTICK ASSY	PC	
E03-02	BIA15612A0A00	O-RING	PC	
E03-03	BLD11310A1B08	COVER UNIT, CRANKCASE, RH	PC	
E03-04	BLD19252A0B08	PUMP COVER	PC	
E03-05	BJZ19255A0A00	DOWEL PINΦ8×10	PC	
E03-06	BLD19254A0A00	PUMP HERMETICAL CIRCLE	PC	
E03-07	FJA22810A0M01	CLUTCH CONTROLLING ROD	PC	
E03-08	GIA22840A0A00	CLUTCH LEVER OIL SEAL	PC	
E03-09	BIA22821A0A00	CLUTCH LEVER SPRING	PC	
E03-10	BIA22825A0A00	SPRING, OPERATING SHAFT, CLUTCH	PC	
E03-11	PGA12218A0A00	HEAD, CYLINDER SET PIN	PC	
E03-12	GIA15620A0A00	SIGHT GLASS	PC	
E03-13	BLD11319A0A00	CRANKCASE COVER GASKET,RH	PC	
E03-14	GIB19258A3A00	OVERFLOW PIPE	PC	
E03-15	GIB35771A0A00	OVERFLOW PIPE CLAMP	PC	
E03-16	BLD15492A0B08	COVER, OIL ELEMENT	PC	
E03-17	MMX15493A1A00	O-RING, OIL ELEMENT COVER	PC	
E03-18	MMX15490A0A00	ELEMENT ASSY., OIL	PC	
E03-19	BLD19270A0A00	GEAR COMP., WATER PUMP DRIVEN	PC	
E03-20	MME19200A0A00	PUMP ASSY., WATER	PC	
E03-21	Q676B25	CLAMP COMP, WATER PIPE	PC	
E03-22	BLE19610A0B01	WATER PIPE	PC	
E03-23	GIB13180A0A00	OIL SEAL, CRANKSHAFT, RH	PC	

 165ML-E E-04 CRANKCASE

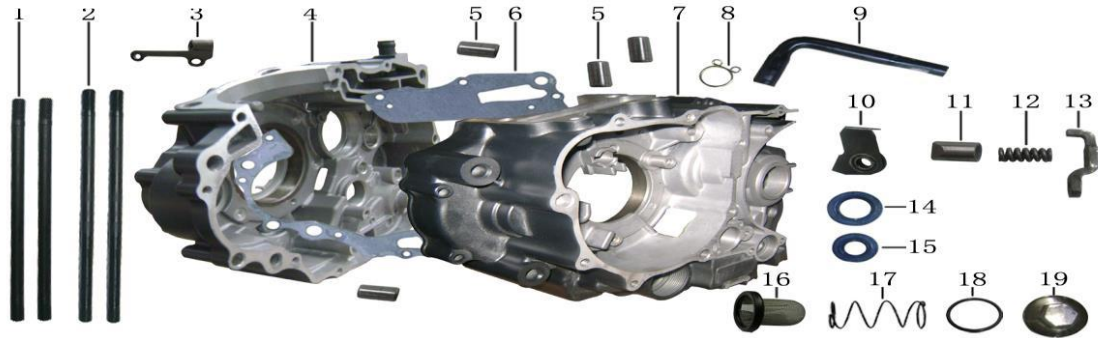

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E04-01	BJX12343A0Z01	STUD B (M8×196.5)	PC	
E04-02	BJX12342A0Z01	STUD A (M8×205)	PC	
E04-03	BLD22824A1M01	ADJUSTING SUPPORT, CLUTCH CABLE	PC	
E04-04	BLD11110A0B08	CRANKCASE, RH	PC	
E04-05	GIA11118A0A00	DOWEL PIN (Φ10×14)	PC	
E04-06	BLD11119A0A00	GASKET, CRANKCASE	PC	
E04-07	BLD11210A0B08	CRANKCASE, LH	PC	
E04-08	GIA20153A0N01	CLIP, EXHAUST PIPE	PC	
E04-09	QJZ20152A2A00	PIPE, EXHAUST	PC	
E04-10	BJA14361A0N01	TIMING CHAIN LIMITED PLATE	PC	
E04-11	FJA11232A0A00	PIN-KEEPING	PC	
E04-12	FJA11233A0Z50	PIN-KEEPING SPRING	PC	
E04-13	FJA11226A0A00	PIN-KEEPING SPRING PLATE	PC	
E04-14	GIA23790A0A00	OIL SEAL, 20×34×7	PC	
E04-15	GIA24190A2A00	OIL SEAL, GEARSHIFT SHAFT	PC	
E04-16	BIA15450A0A00	GAUZE FILTER	PC	
E04-17	BIA15461A0A00	SPRING	PC	
E04-18	BIA12246A0A00	O-RING, COVER GAUZE(Φ35×Φ3)	PC	
E04-19	BIA15463A0M01	COVER, GAUZE FILTER	PC	

 165ML-E E-05 OIL PUMP & STARTING MOTOR

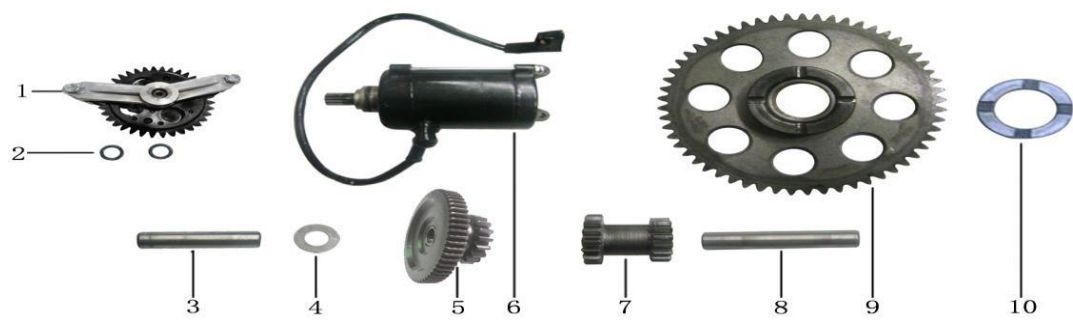


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E05-01	BLD15100A0A00	OIL PUMP ASSY	PC	
E05-02	BIA15131A0A00	O-RING (Φ9.4×Φ2.4)	PC	
E05-03	BLA28321A0A00	SHAFT, DUAL-GEAR I	PC	
E05-04	BJX28312A0A00	WASHER, DUAL-GEAR	PC	
E05-05	GLX28311A1A00	DUAL-GEAR COMP. I	PC	
E05-06	GIA34700C6B08	STARTING MOTOR	PC	
E05-07	BJX28330A0A00	DUAL-GEAR COMP.II	PC	
E05-08	BLA28341A0A00	SHAFT, DUAL-GEAR II	PC	
E05-09	BJX28150A0A00	GEAR SET, STARTING CLUTCH	PC	
E05-10	BJX28172A0A00	WASHER, GEAR, STARTING CLUTCH	PC	

165ML-E E-06 MAGNETO




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E06-01	BJP31210A0A00	STATOR SET, MAGNETO	PC	
E06-02	BJP31102A1A00	FLYWHEEL CLUTCH ASSY	PC	
E06-03	BJP31110A0A00	ROTOR SET, MAGNETO	PC	
E06-04	GLX28110A0A00	STARTING CLUTCH ASSY	PC	
E06-05	PGB11412A0B08	PLUG, WATCH HOLE	PC	
E06-06	BIA11414A0A00	O-RING, WATCH HOLE PLUG	PC	
E06-07	BLD11411A0B08	COVER, CRANKCASE, LH	PC	
E06-08	GIA11422A0A00	O-RING, $\Phi 63 \times \Phi 3$	PC	
E06-09	BJX11421A0B08	COVER, UPPER	PC	
E06-10	BLA31911A0A00	CLIP, MAGNETO WIRE	PC	
E06-11	BIA31213A0A00	STOPPER, MAGNETO WIRING HARNESS	PC	
E06-12	GIA31913A0Z01	BOLT, M10x45	PC	
E06-13	BLA31312A0A00	THRUST WASHER	PC	
E06-14	BLA11419A1A00	GASKET, CRANKCASE COVER, LH	PC	
E06-15	GIA11118A0A00	DOWEL PIN, CRANKCASE	PC	
E06-16	GIA11413A0B08	COVER, LH	PC	
E06-17	BIA11415A0A00	O-RING, PLUG,	PC	
E06-18	BLD11451A0W01	REAR COVER, LH	PC	

 165ML-E E-07 CLUTCH

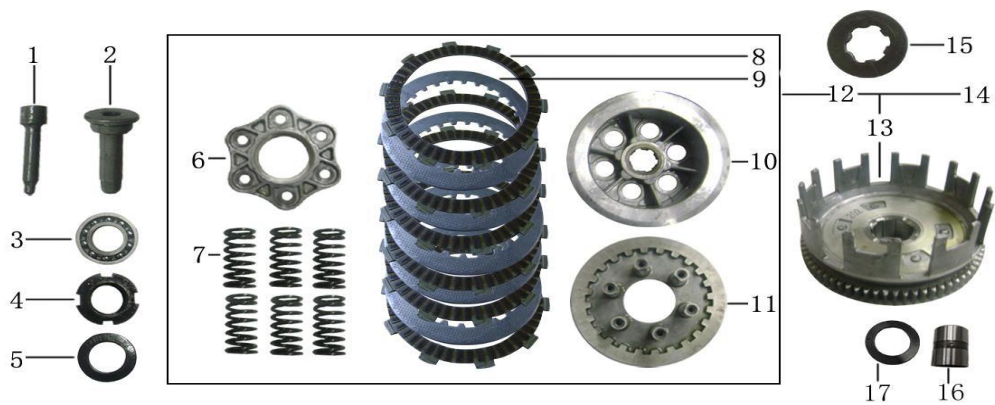


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E07-01	BIA22871A1A00	CLUTCH MANDREL	PC	
E07-02	BIA22861A1A00	CLUTCH PUSHER	PC	
E07-03	Q96516003	BEARING, 16003	PC	
E07-04	XXXXXXXXXXXX	LOCK NUT	PC	
E07-05	XXXXXXXXXXXX	THRUST WASHER	PC	
E07-06	XXXXXXXXXXXX	PLATE, CLUTCH LIFTER	PC	
E07-07	XXXXXXXXXXXX	SPRING, CLUTCH	SET	
E07-08	GIA22330B1A00,GIA22330A7A00	DISC SET, CLUTCH FRICTION	SET	
E07-09	GIA22341A1A00	PLATE, CLUTCH	PC	
E07-10	XXXXXXXXXXXX	PLATE, CLUTCH PRESSURE	PC	
E07-11	XXXXXXXXXXXX	CENTER COMP., CLUTCH	PC	
E07-12	XXXXXXXXXXXX	CLUTCH ASSY	PC	
E07-13	XXXXXXXXXXXX	OUTER COMP., CLUTCH	PC	
E07-14	BLD22100A0A00	BODY, CLUTCH	PC	
E07-15	GIA22372A0A00	SPLINE WASHER	PC	
E07-16	FLA22373A0A00	BUSH, CLUTCH	PC	
E07-17	FLA22348A0A00	COLLAR, CLUTCH	PC	

 165ML-E E-08 CRANKSHAFT & PISTON

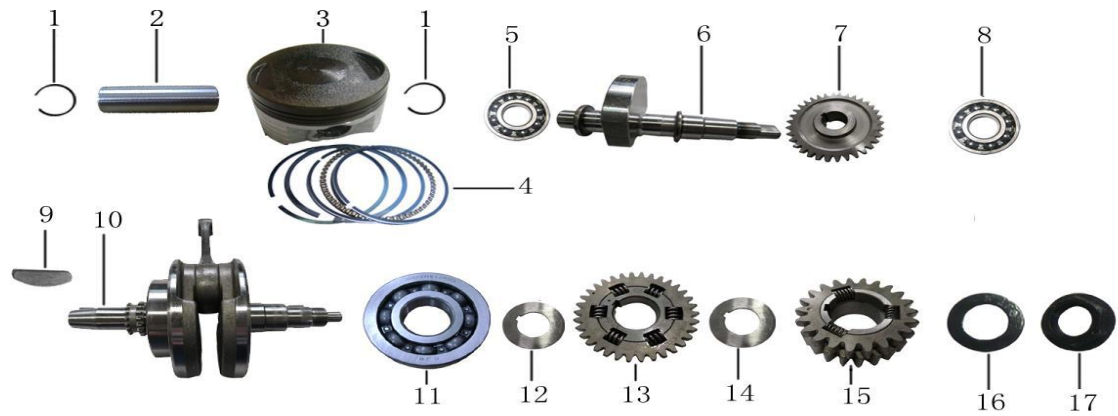

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E08-01	MIA13222A0A00	CIRCLIP, PISTON PIN	PC	
E08-02	MIA13221A0A00	PIN, PISTON	PC	
E08-03	BLC13211A0A00	PISTON	PC	
E08-04	BLC13300A0A00	RING SET, PISTON	PC	
E08-05	Q9656204P6F	BEARING,6204/P6/FJK	PC	
E08-06	BLD13611A0A00	BALANCE SHAFT	PC	
E08-07	SLZ13641A1A00	GEAR, BALANCE SHAFT DRIVEN	PC	
E08-08	Q9656302C	BEARING,6302/CJB	PC	
E08-09	VMA13118A0A00	KEY, WOODRUFF	PC	
E08-10	BLE13100A0A00	CRANKSHAFT & CONNECTING ROD	PC	
E08-11	FB093850A1A00	BEARING, CRANKSHAFT, RH	PC	
E08-12	SLZ13633A0A00	WASHER, BALANCE SHAFT DRIVE GEAR	PC	
E08-13	SLZ13630A1A00	GEAR COMP., BALANCE SHAFT DRIVE	PC	
E08-14	SLZ13634A0A00	WASHER II, BALANCE SHAFT DRIVE GEAR	PC	
E08-15	BLD22620A0A00	GEAR COMP., PRIMARY DRIVE	PC	
E08-16	MMX22633A0A00	WASHER, PRIMARY DRIVE GEAR SPRING	PC	
E08-17	MMX22631A0N03	NUT, PRIMARY DRIVE GEAR FASTENING	PC	

 165ML-E E-09 TRANSMISSION

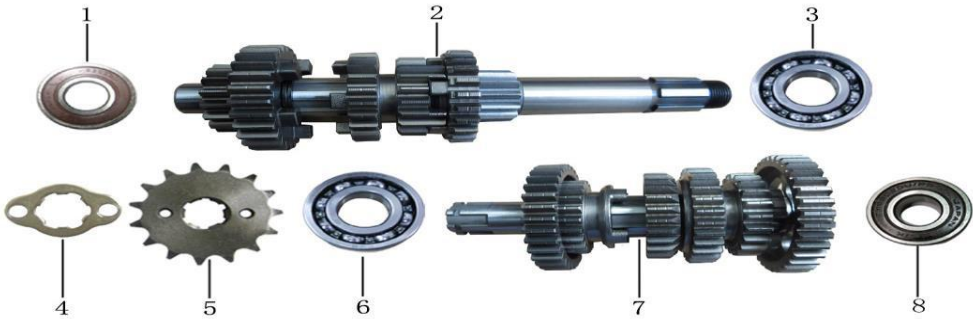

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E09-01	Q965D6202F	BEARING, 6202 RS	PC	
E09-02	BLD23600A0A00	MAIN SHAFT ASSY	PC	
E09-03	Q9656204P6F	BEARING, 6204/P6/FJK	PC	
E09-04	GIA22712A0N03	LOCATING PLATE, SPROCKET	PC	
E09-05	GIA22711B9Z50	SPROCKET, OUTPUT	PC	
E09-06	Q9656204P6F	BEARING, 6204/P6/FJK	PC	
E09-07	BLD23700A0A00	COUNTERSHAFT ASSY	PC	
E09-08	FB093850A8A00	BEARING, NEEDLE,6203\FJK	PC	

165ML-E E-10 GEARSHIFT DEVICE



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E10-01	FJA24220A0A00	SHAFT COMP., GEARSHIFT	PC	
E10-02	Q5100410F35	SET PIN, 4x10	PC	
E10-03	BLD24210A0A00	DRUM	PC	
E10-04	PIF24421A0A00	SHAFT, FORK	PC	
E10-05	FJA24411A0A00	FORK (I)	PC	
E10-06	FLA24412A0A00	FORK (II)	PC	
E10-07	GIA35760A0A00	GEAR INDICATOR CONTACT POINT COMP	PC	
E10-08	FJA35723A0A00	O-RING, GEAR INDICATOR	PC	
E10-09	BLD35710A0A00	GEAR INDICATING WIRE HARNESS	PC	
E10-10	FJA24310A0A00	LIMIT PLATE	PC	
E10-11	FJA24323A0Z50	SPRING, LOCATING PLATE TORSION	PC	
E10-12	FB093541G1N01	GEARSHIF SHAFT WASHER	PC	
E10-13	BLD24100A0N03	GEARSHIFT SHAFT ASSY	PC	
E10-14	BLD24422A0A00	SHAFT, FORK II	PC	

165ML-E E-11 GEARSHIFT PEDAL & CARBURETOR




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E11-01	QJZ24700A0M01	Gearshift pedal Assy	PC	

165ML-E E-12 ELECTRIC ELEMENTS



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E12-01	GIA34600A0A00	START RELAY	PC	
E12-02	GIX31600A0A00	VOLTAGE REGULATOR	PC	
E12-03	VMA34500A2A00	IGNITION COIL	PC	

 165ML-E E-13 A FULL SET OF GASKET

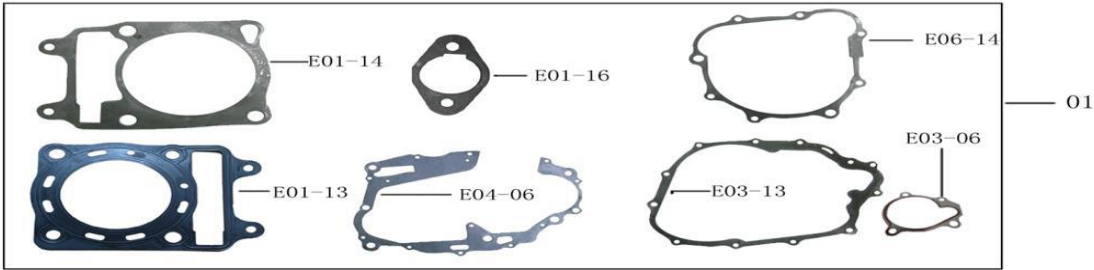


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E13-01	XXXXXXXXXXXXX	A FULL SET OF GASKET	PC	SET

165ML-E E-14 A FULL SET OF SEAL

1					
	ID	PARTS NO.	PARTS NAME	UNIT	REMARK
	E14-01	XXXXXXXXXXXXX	A FULL SET OF SEAL	PC	SET

 165ML-E E-15 A FULL SET OF O-RING

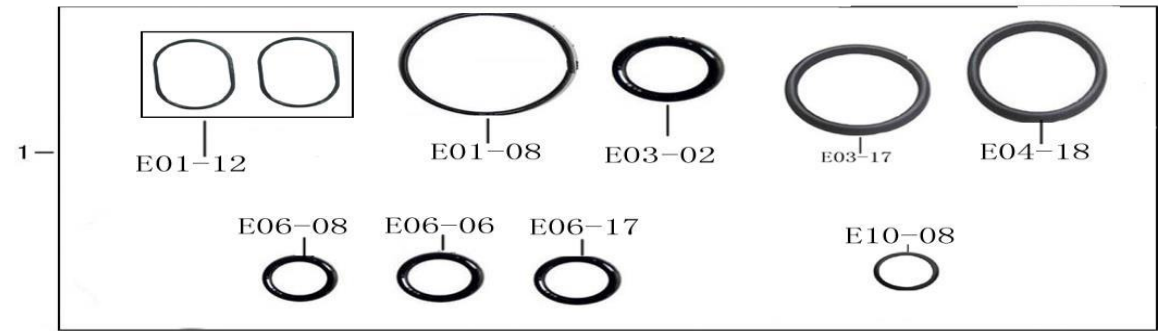

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E15-01	XXXXXXXXXXXX	A FULL OF O-RING	PC	SET

165ML-E E-16 A FULL SET OF BEARING




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
E16-01	XXXXXXXXXXXXX	A FULL SET OF BEARING	PC	SET

LF200-3B F-01 LIGHTS



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F01-01	QLX33100A0A00	HEADLIGHT ASSY	PC	
F01-02	QLX33550A1A00	WINKER, FRONT, LH	PC	
F01-03	QLX33510A1A00	WINKER, FRONT, RH	PC	
F01-04	QLX33610A1A00	WINKER, REAR, RH	PC	
F01-05	QLX33650A1A00	WINKER, REAR, LH	PC	
F01-06	QLX33700A0A00	TAILLIGHT ASSY	PC	
F01-07	QJZ33760A3A00	LIGHT COMP., LICENSE PLATE	PC	

 LF200-3B F-02 FRONT FAIRING

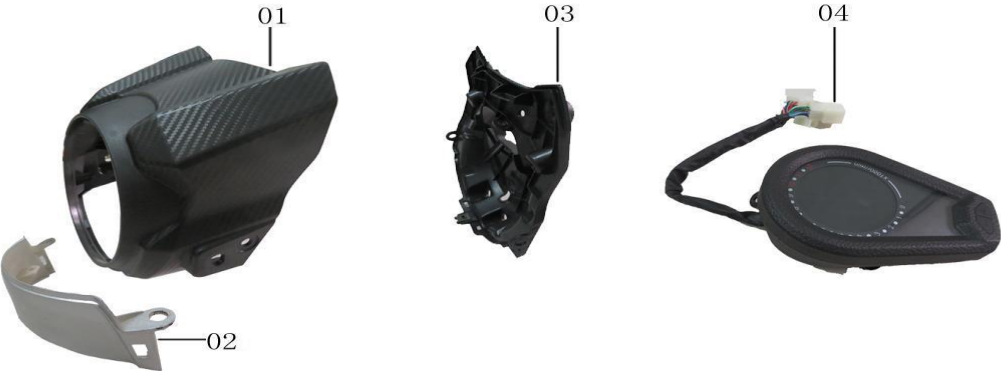

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F02-01	QLX43111A1A00	HOUSING SET, HEADLIGHT	PC	
F02-02	QLX43117A0W01	ORNAMENT, HEADLIGHT HOUSING	PC	
F02-03	QLX43113A1A00	PLATE, HEADLIGHT HOUSING	PC	
F02-04	QLX37000A0A00	METER ASSY	PC	

LF200-3B F-03 GRIP & SWITCH




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F03-01	QLR46310A0A00	CABLE COMP., THROTTLE	PC	Y
F03-02	NJB46200A0A00	CABLE, CLUTCH	PC	Y
F03-03	QLX47110A1B03	BRIDGE, UPPER	PC	Y
F03-04	QLX47300A0A00	GRIP COMP., THROTTLE	PC	Y
F03-05	QLX47411A0A00	GRIP, LH	PC	Y
F03-06	QLX35100A0A00	SWITCH, HANDLEBAR, RH	PC	Y
F03-07	QMA35200A0A00	SWITCH, HANDLEBAR, LH	PC	Y
F03-08	QLX57100A0B01	MIRROR, REARVIEW, RH	PC	Y
F03-09	QLX57200A0B01	MIRROR, REARVIEW, LH	PC	Y
F03-10	QJZ47600A0B01	LEVER SET, CLUTCH	PC	Y

LF200-3B F-04 STEERING STEM



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F04-01	QLX51210A0B03	STEM SET, STEERING	SET	
F04-02	QJX51951A0A00	STEERING STEM BEARING SET	PC	
F04-03	QJX51950A1A00	PIPE SET, STEERING BAR	PC	
F04-04	QJX51952A0A00	LUG, SPEED SENSOR	PC	
F04-05	QJZ51954A0A00	PIPE SET, STEERING BAR	PC	
F04-06	QJZ35940A0B01	STAY SET, IGNITION SWITCH	PC	
F04-07	QLX51310A0B03	BRIDGE SET, STEERING STEM TOP	PC	
F04-08	ZMD51313A0M01	CUSHION COVER, STEERING STEM	PC	
F04-09	QLX47151A0B03	CLAMP, STEERING BAR, RH	PC	
F04-10	QLX47161A0B03	CLAMP, STEERING BAR, LH	PC	
F04-11	QLX47120A0B03	HOLDER SET, STEERING BAR PIPE	PC	
F04-12	ZMD51214A0A00	UPPER CUSHION, STEERING STEM	PC	

 LF200-3B F-05 FRONT FENDER & SHOCK ABSORBER

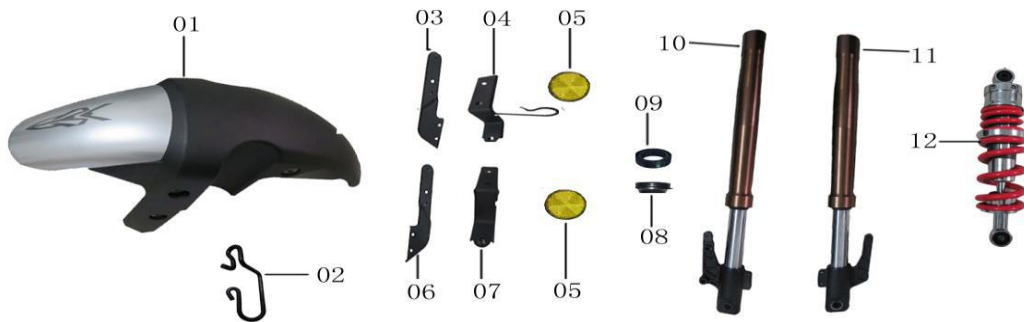

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F05-01	QLX53110A0W30	FRONT FENDER	PC	
F05-02	WIA35946A0N03	WIRE HOLDER (FRONT BRAKE)	PC	
F05-03	QLX53910A0B03	FRONT RIGHT FENDER BRAKET COMP.	PC	
F05-04	QLX33850A1B03	SIDE REFLECTOR BRAKET COMP.RH	PC	
F05-05	NIX33810A0A00	REFLECTOR, FRONT	PC	
F05-06	QLX53920A0B03	FRONT LEFT FENDER BRAKET COMP.	PC	
F05-07	QLX33850A0B03	SIDE REFLECTOR BRAKET COMP.LH	PC	
F05-08	QLR52437A0A00	OIL SEAL,FRONT SHOCK ABSORBER	PC	
F05-09	QLR52439A0A00	DUST COVER	PC	
F05-10	QLX52400A0H31	SHOCK ABSORBER, FRONT, RH	PC	
F05-11	QLX52500A0H31	SHOCK ABSORBER, FRONT, LH	PC	
F05-12	QJZ62100A0M01	SHOCK ABSORBER ASSY, REAR	PC	
	QLX52400A0H32	SEAL SHOCK 35*48*11		

LF200-3B F-06 FUEL TANK GUARD




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F06-01	QLX19461A0A00	HOOD, RADIATOR	PC	
F06-02	QLX49121A0A00	ORNAMENT II, FUEL TANK, LH	PC	
F06-03	QLX49111A0A00	ORNAMENT II, FUEL TANK, LH	PC	
F06-04	QLX49112A0A00	ORNAMENT, FUEL TANK INNER, RH	PC	
F06-05	QLX49122A0A00	ORNAMENT, FUEL TANK INNER, LH	PC	
F06-06	QLX43541A0A00	ORNAMENT, FUEL TANK, RH	PC	
F06-07	QLX43545A0A00	ORNAMENT, FUEL TANK, LH	PC	

LF200-3B F-07 FUEL TANK



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F07-01	QJZ16951A0A00	CUSHION, FUEL TANK FRONT	PC	
F07-02	QLX43543A1A00	ORNAMENT, FUEL TANK UPPER	PC	
F07-03	QLX37810A0A00	SENSOR, FUEL	PC	
F07-04	TY039520A0A00	PUMP, OIL	PC	
F07-05	QLX16610C7B02	TANK COMP., FUEL	PC	
F07-05	QLX16610C8F19	TANK COMP., FUEL	PC	
F07-06	QLX49110A0A00	RIGHT STRIP,FUEL TANK	PC	
F07-07	QLX16954A0B03	PLATE, FUEL TANK FRONT	PC	
F07-08	QLX49120A0A00	LEFT STRIP,FUEL TANK	PC	
F07-09	QLX16957A0B03	PLATE, FUEL TANK FRONT II	PC	
F07-10	QJZ16995A0A00	CUSHION, REAR FUEL TANK	PC	
F07-11	QLX16700A0A00	HOSE	PC	

 LF200-3B F-08 SIDE COVER

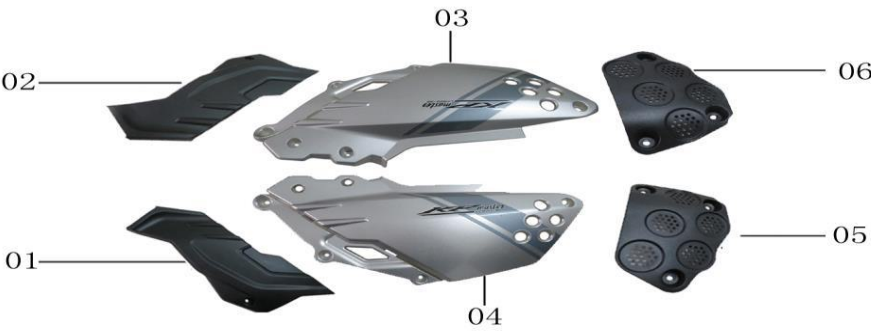


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F08-01	QLX43414A0A00	ORNAMENT, SIDE COVER, LH	PC	
F08-02	QLX43314A0A00	ORNAMENT, SIDE COVER, RH	PC	
F08-03	QLX43310D7W01	COVER SET, SIDE, RH	PC	
F08-03	QLX43310D8W01	COVER SET, SIDE, RH	PC	
F08-04	QLX43410D7W01	COVER SET, SIDE, LH	PC	
F08-04	QLX43410D8W01	COVER SET, SIDE, LH	PC	
F08-05	QLX43416A0A00	GAUZE, ORNAMENT, LH	PC	
F08-06	QLX43316A0A00	GAUZE, ORNAMENT, RH	PC	

LF200-3B F-09 FRONT WHEEL



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F09-01	QIX61951A2N04	AXLE, FRONT	PC	
F09-02	QJZ54912A0N04	BUSH, FRONT WHEEL, RH	PC	
F09-03	QJS56311A2A00	DISC, FRONT BRAKE	PC	
F09-04	QLR54100A0B03	RIM COMP., FRONT WHEEL	PC	
F09-05	QLR54700A1A00	TYRE, FRONT	PC	
F09-06	QJS37870A1A00	SENSOR, SPEED	PC	

 LF200-3B F-10 REAR FORK

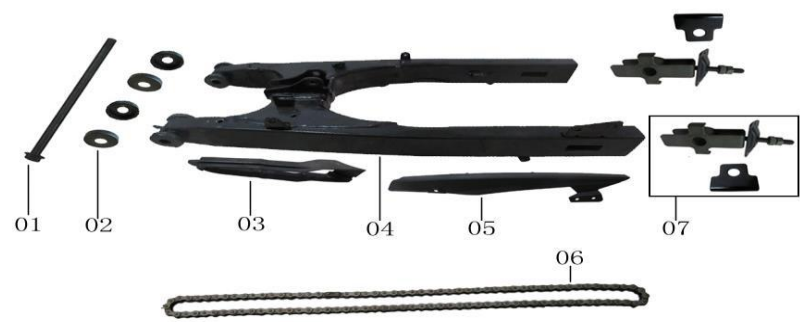

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F10-01	QJZ61951A1N04	SHAFT, REAR FORK	PC	
F10-02	QLL61240A0N04	DUST COVER, REAR FORK SHAFT	PC	
F10-03	QLR61491A1A00	GUIDE, CHAIN	PC	
F10-04	QLX61101A0B15	FORK COMP., REAR	PC	
F10-05	QLX61311A1A00	CHAINCASE	PC	
F10-06	Q980428MH128C	CHAIN, 428MH×128	PC	
F10-07	QJZ61400A1A00	ADJUSTER SET, CHAIN	PC	

LF200-3B F-11 REAR WHEEL



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F11-01	QJZ66311A1A00	DISC, REAR BRAKE	PC	
F11-02	QLR68500A2A00	HUB ASSY, SPROCKET	PC	
F11-03	QJZ64253A1	BUFFER, REAR WHEEL	PC	
F11-04	QLR68521A2N01	SPROCKET	PC	
F11-05	QLR64100A4B03	RIM, REAR WHEEL	PC	
F11-06	QJZ64913A0N04	REAR WHEEL BUSH,LH	PC	
F11-07	QJZ64912A0N04	REAR WHEEL BUSH, RH	PC	
F11-08	ZJX54911A1N04	AXLE, REAR	PC	
F11-09	QLR64700A1A00	TYRE, REAR	PC	

LF200-3B F-12 SEAT & REAR FENDER




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F12-01	QJZ63411A0A00	FLAP, REAR MUD	PC	
F12-02	QLX63111A0A00	HEAD, REAR FENDER	PC	
F12-03	QLX63131A0A00	BODY, REAR FENDER MID	PC	
F12-04	QLX44920A0B12	PLATE SET, SEAT REAR CONNECTING	PC	
F12-05	QLX63151A2A00	TAIL, REAR FENDER	PC	
F12-06	ZJA33820A0A00	REFLECTOR,REAR	PC	
F12-07	QLX44100A0A00	SEAT ASSY	PC	
F12-08	QLX63155A0A00	ORNAMENT, REAR FENDER REAR	PC	

LF200-3B F-13 AIR CLEANER & EXHAUST MUFFLER




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F13-01	QLX17100A0A00	CLEANER ASSY, AIR	PC	
F13-02	QJZ17120A0A00	ELEMENT, AIR CLEANER	PC	
F13-03	QJZ17125A0A00	ELEMENT II , AIR CLEANER	PC	
F13-04	QLX31850A0B03	PLATE SET, BATTERY PRESSING	PC	
F13-05	QLX18392A0W01	MANTLE, MUFFLER	PC	
F13-06	QLX18390A0B11	ORNAMENT SET, MUFFLER	PC	
F13-07	QLX18281A0A00	HOOD, EXHAUST PIPE	PC	
F13-08	QLX18000A0B11	EXHAUST MUFFLER ASSY	PC	

 LF200-3B F-14 FRONT & REAR BRAKE

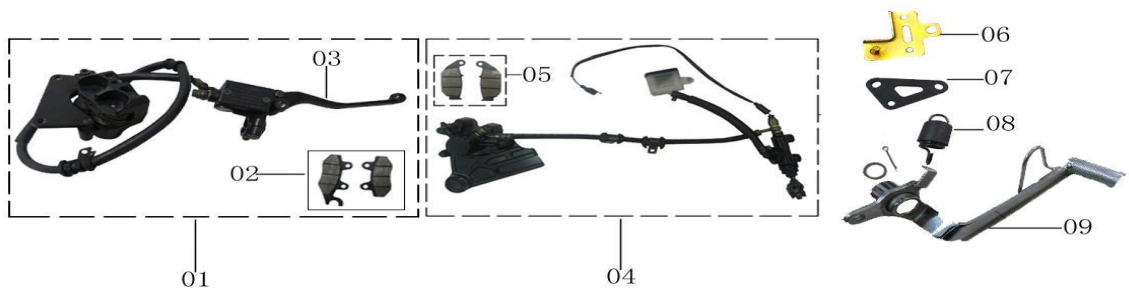

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F14-01	QLX56010A0A00	BRAKE COMP., FRONT HYDRAULIC	PC	
F14-02	QJZ56520A3A00	FRONT BRAKE SHOE SET	PC	
F14-03	QJZ47511A0B01	FRONT BRAKE LEVER	PC	
F14-04	QLX66010A0A00	REAR HYDRAULIC DISC BRAKE	PC	
F14-05	QJZ66520A3A00	REAR BRAKE SHOE SET	PC	
F14-06	QJZ66940A0N03	BRACKET SET, REAR BRAKE RESERVOIR	PC	
F14-07	QLX65415A0N03	HANGING PLATE,REAR BRAKE SPRING	PC	
F14-08	QLX65940A0N04	SPRING SET, REAR BRAKE PEDAL	PC	
F14-09	QJZ65410A0M01	PEDAL, REAR BRAKE	PC	

 LF200-3B F-15 FOOTRESTS

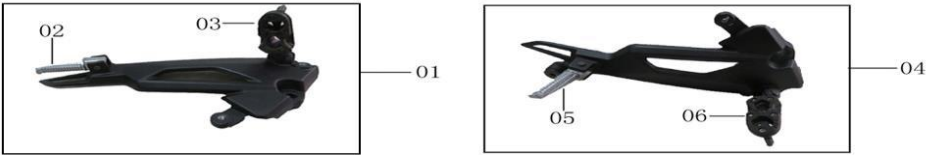


ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F15-01	QLX42400A0B08	FOOTREST ASSY, RIDER, LH	PC	
F15-02	QJZ42611A0A00	TREADLE, PILLION, LH	PC	
F15-03	QLX42410-0001	FOOTREST COMP., RIDER, LH	PC	
F15-04	QLX42300A0B08	FOOTREST ASSY, RIDER, RH	PC	
F15-05	QJZ42511A0A00	TREADLE, PILLION, RH	PC	
F15-06	QLX42310-0001	FOOTREST COMP., RIDER, RH	PC	

LF200-3B F-16 FRAME BODY



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F16-01	QLX41100A0B15	BODY WELDMENT, FRAME	PC	
F16-02	QLL42710A1B03	PLATE SET, ENGINE FRONT CONNECTING	PC	
F16-03	QLR42200A0B01	STAND, SIDE	PC	
F16-04	QLX45511A0W01	HANDRAIL, RH	PC	
F16-05	QLX45531A0W01	HANDRAIL, LH	PC	
F16-06	QLX63910A0B03	BRACKET, REAR FENDER FRONT BODY FRONT	PC	
F16-07	QLX48000A1A00	LOCK ASSY	PC	

 LF200-3B F-17 RADIATOR

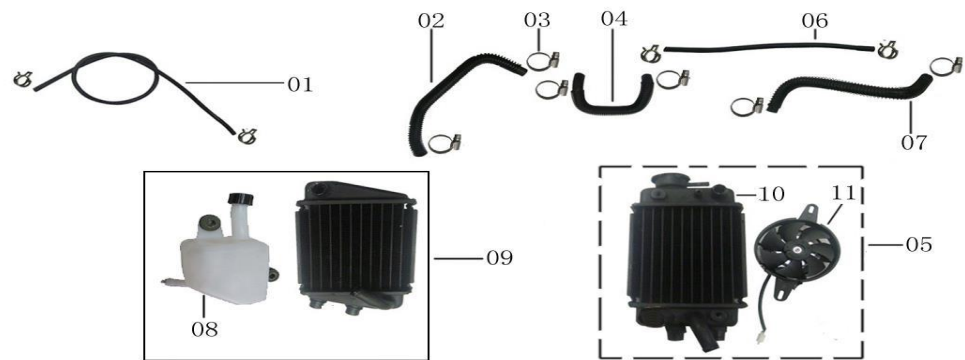

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F17-01	QLX19362A0A00	PIPE, SMALL	PC	
F17-02	QJZ19430A1A00	HOSE, RADIATOR INLET	PC	
F17-03	Q676B25	CLAMP, 25	PC	
F17-04	QJZ20176A1A00	PIPE., CONNECTING	PC	
F17-05	QLX19420A0B01	RADIATOR SET II.	PC	
F17-06	QLX19131A0A00	PIPE, STORAGE RESERVOIR OUTLET	PC	
F17-07	QLX19430A0A00	HOSE, RADIATOR OUTLET	PC	
F17-08	QLX19100-0001	RESERVOIR, STORAGE	PC	
F17-09	QLX19400A0B01	RADIATOR SET	PC	
F17-10	XXXXXXXXXXXXX	RADIATOR	PC	
F17-11	JMH19800A0A00	FAN ASSY	PC	

LF200-3B F-18 ELECTRICAL ELEMENTS




ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F18-01	QLX32100B4A00	CABLE, MAIN	PC	
F18-02	QJZ38100A1B01	HORN	PC	
F18-03	QMA38210B1A00	RELAY, FLASHING	PC	
F18-04	TY038270A0A00	EFI RELAY	PC	
F18-05	QLX31500A1A00	BATTERY,12N9-BS	PC	SAME WITH LOCAL IN INDONESIA

LF200-3B F-19 FUEL EVAPORATING SYSTEM



ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F19-01	QLX20300A0A00	FUEL EVAPORATING SYSTEM	PC	
F19-02	QJZ20430A0B01	STAY,CANISTER, ACTIVE CARBON	PC	

 LF200-3B F-20 ELECTRONIC FUEL INJECTION SYSTEM

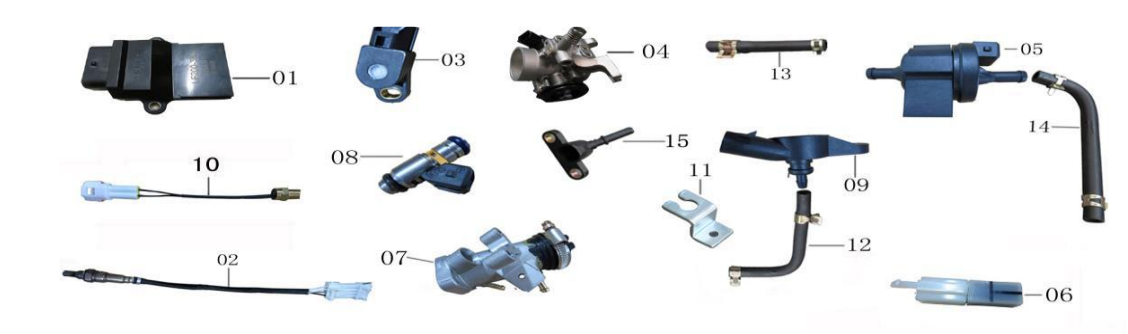

ID	PARTS NO.	PARTS NAME	UNIT	REMARK
F20-01	QLX39100A1A00	EFI CONTROLLER	PC	
F20-02	WKP39310A0A00	OXYGEN SENSOR	PC	
F20-03	WKP39320A0A00	THROTTLE POSITION SENSOR	PC	Non-Supply
F20-04	AIA39601A0A00	THROTTLE BODY	PC	
F20-05	WKP39620A0A00	IDLE VALVE (CARBON CANISTER)	PC	
F20-06	WKP39350A0A00	AIR TEMPERATURE SENSOR	PC	
F20-07	BLE39701A2Z50	INTAKE MANIFOLD COMP	PC	
F20-08	TY039650A7A00	INJECTOR	PC	
F20-09	TY039330A0A00	INTAKE PRESSURE SENSOR	PC	
F20-10	TY039340A0A00	WATER TEMPERATURE SENSOR	PC	
F20-11	BLC39741A0A00	LUG, INTAKE AIR PRESSURE SENSOR	PC	
F20-12	QJP39613A0A00	PIPE, PRESSURE COLLECTING	PC	
F20-13	QJP39442A0A00	PIPE, IDLING GULP	PC	
F20-14	QJP39445A2A00	PIPE, IDLING GULP VALVE INLET	PC	
F20-15	QMA39630A1A00	RAIL, FUEL	PC	